



FRAMING CONFIGURATION – Opening Framing – Edit

Modified on: Sun, 10 Jan, 2021 at 5:34 PM

Framing Configuration may be found in two locations:

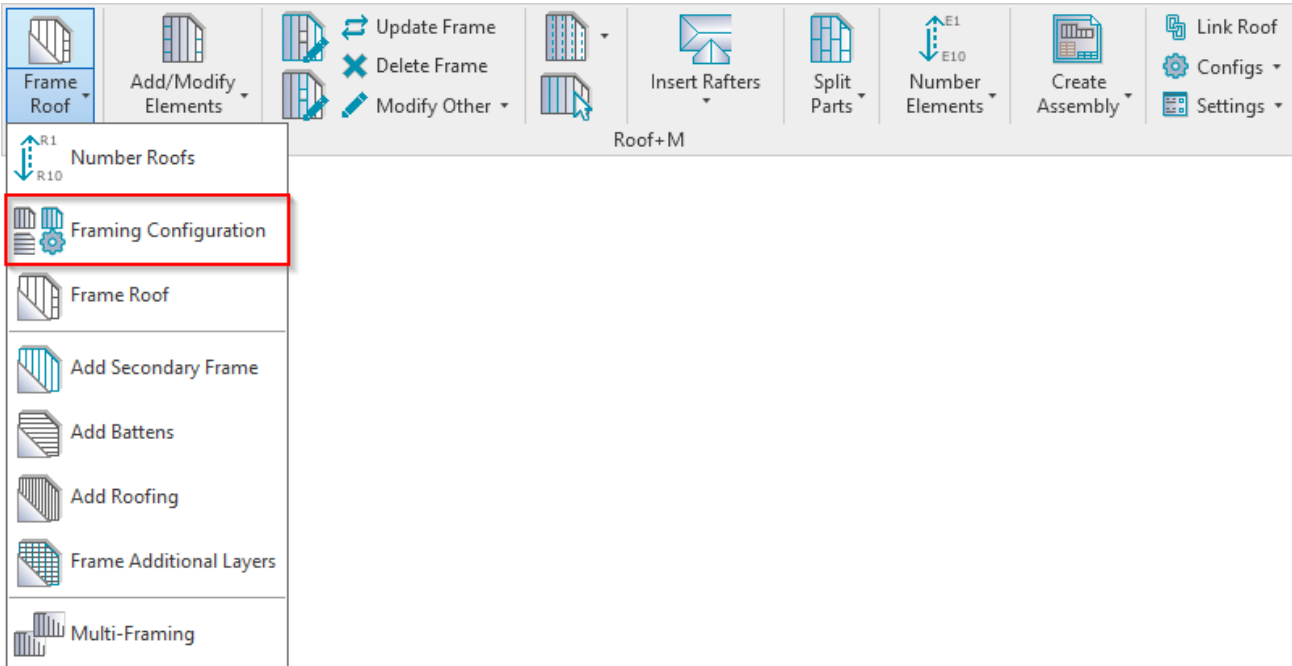


OR:

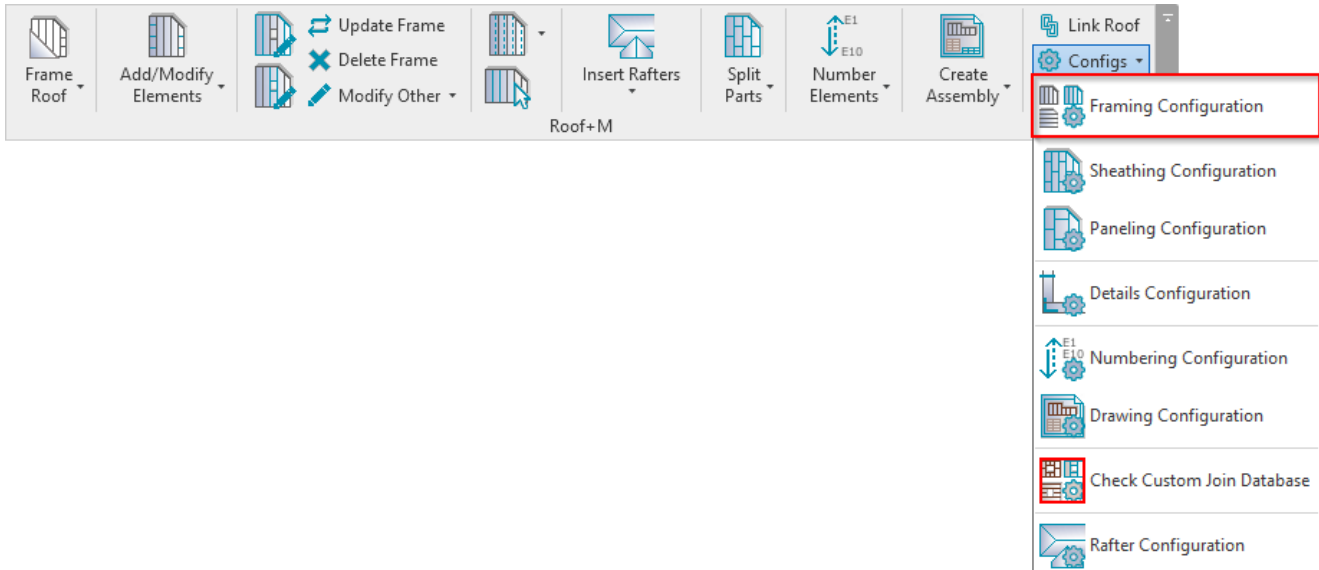


Edit Opening Framing Configuration

In order to edit, create new, rename, or delete opening framing configuration, you have to click **Edit Configuration** for the structural or non-structural roofs:

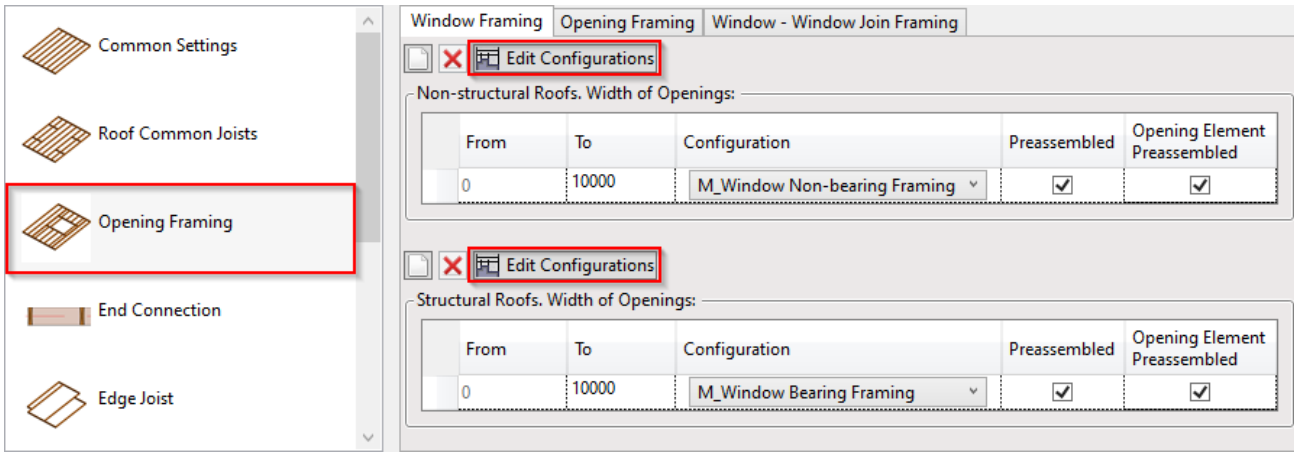

Default configurations will come together with the software. Default path to opening configurations is:
C:\Users\user name\AppData\Roaming\Tools 4 Revit\Roof+M (version) Configurations\Framing Configurations\Metric or Imperial\Configuration name

It saves all the settings of trimmer joists, headers, trimmers, other joists that are listed down below in the dialog:

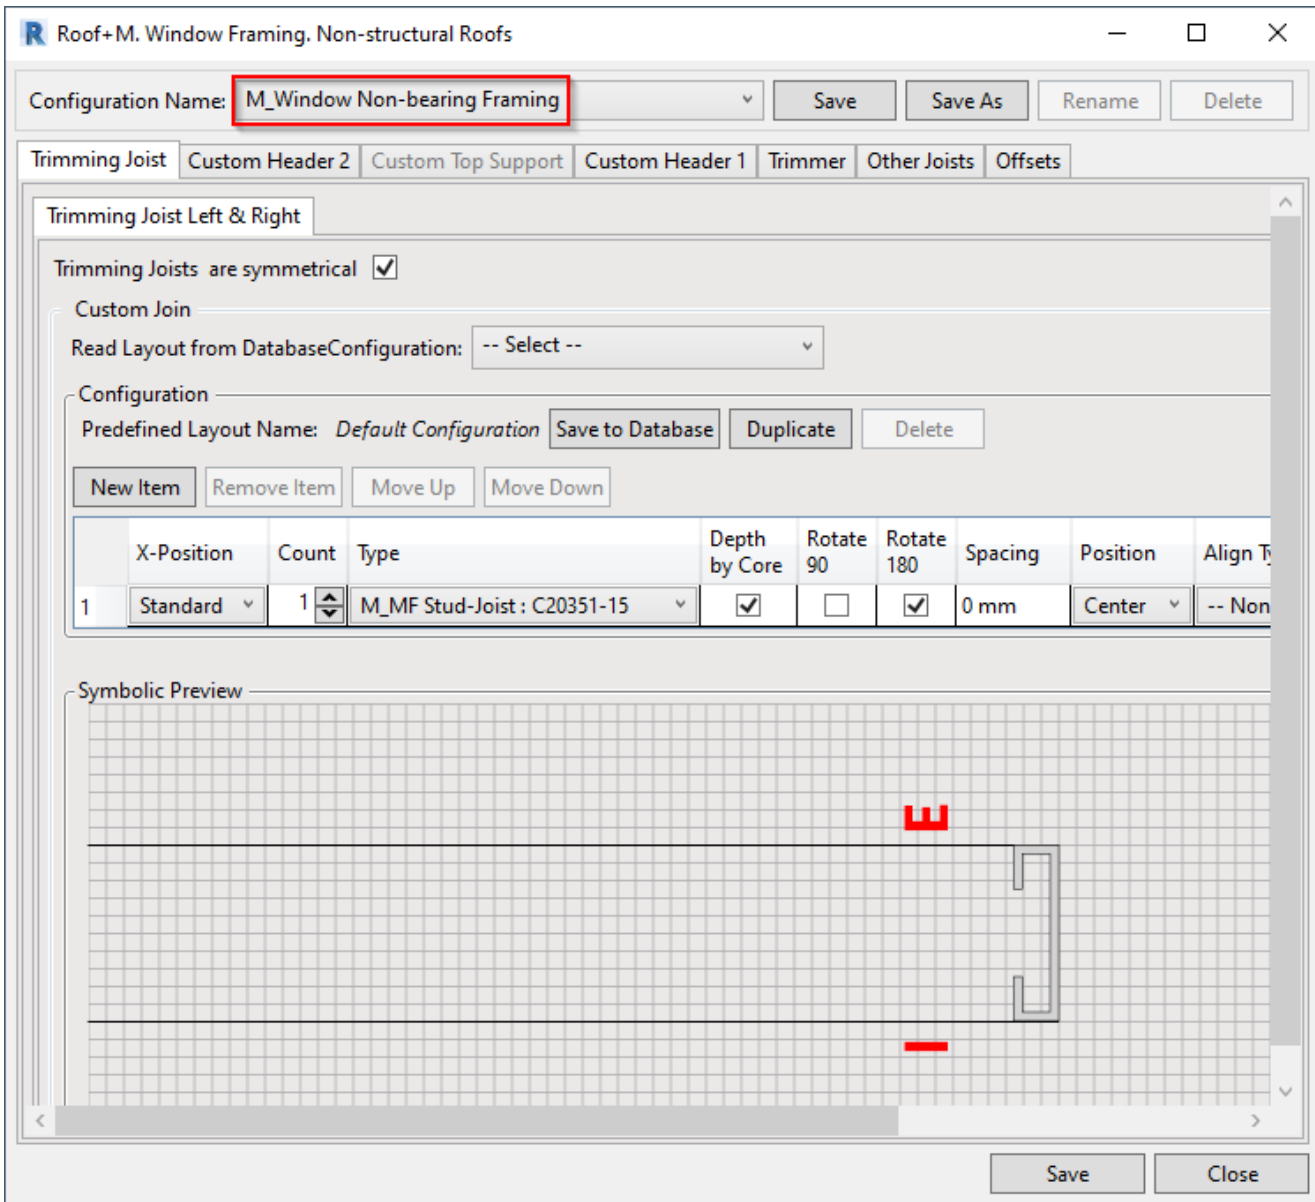

[Read more about every feature here >>](https://agacad.freshdesk.com/support/solutions/articles/44002142425-framing-configuration-%E2%80%93-opening-framing-%E2%80%93-edit) (<https://agacad.freshdesk.com/support/solutions/articles/44002142425-framing-configuration-%E2%80%93-opening-framing-%E2%80%93-edit>)

