



FRAMING CONFIGURATION – End Connection

Modified on: Sun, 10 Jan, 2021 at 6:00 PM


Framing Configuration may be found in two locations:

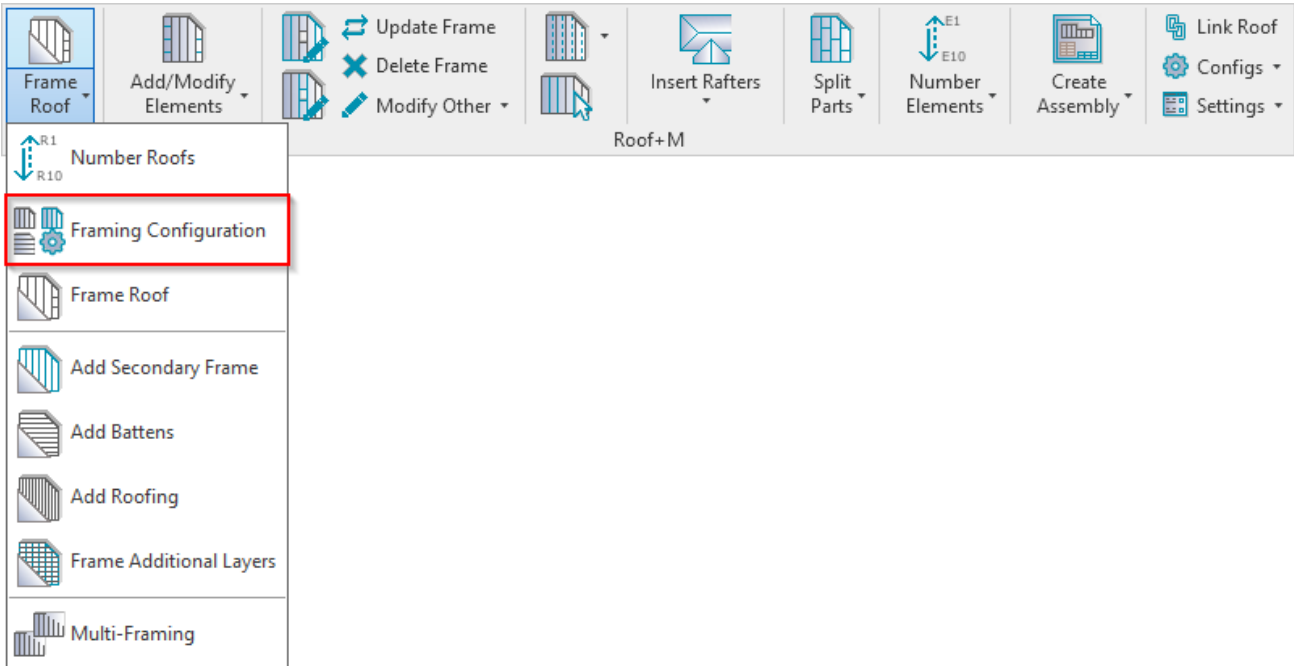

OR:

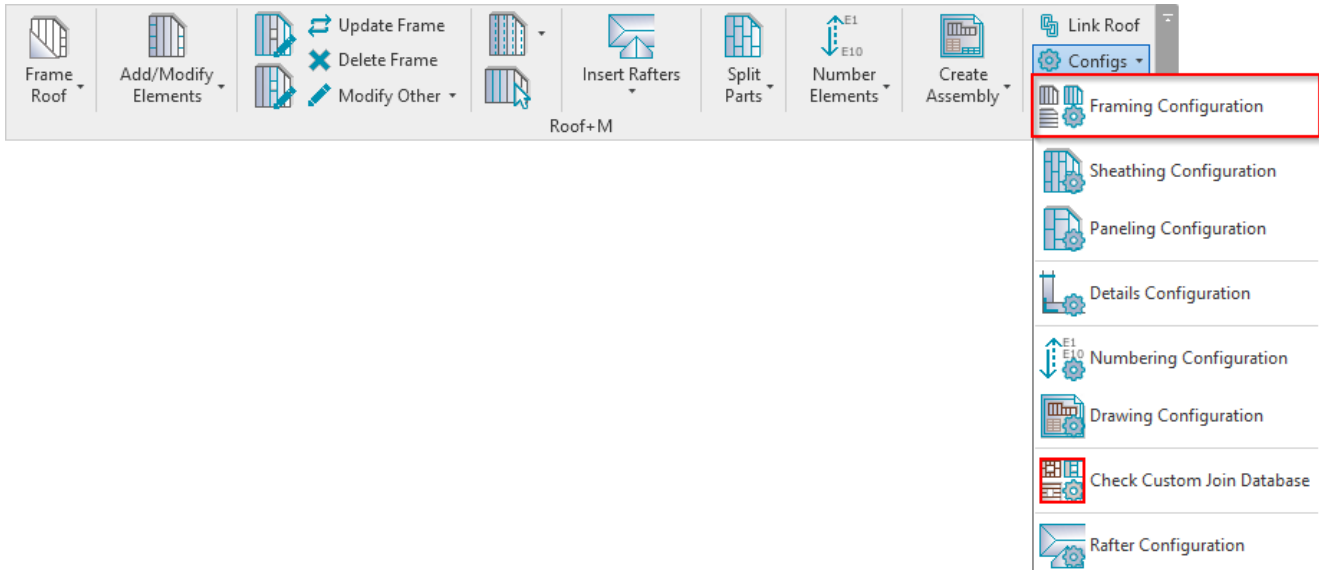


1. Choose **Framing Configuration** from **Roof+M** menu
2. Choose **Configuration Type** that corresponds to the framing layer of the roof
3. Select **End Connection**

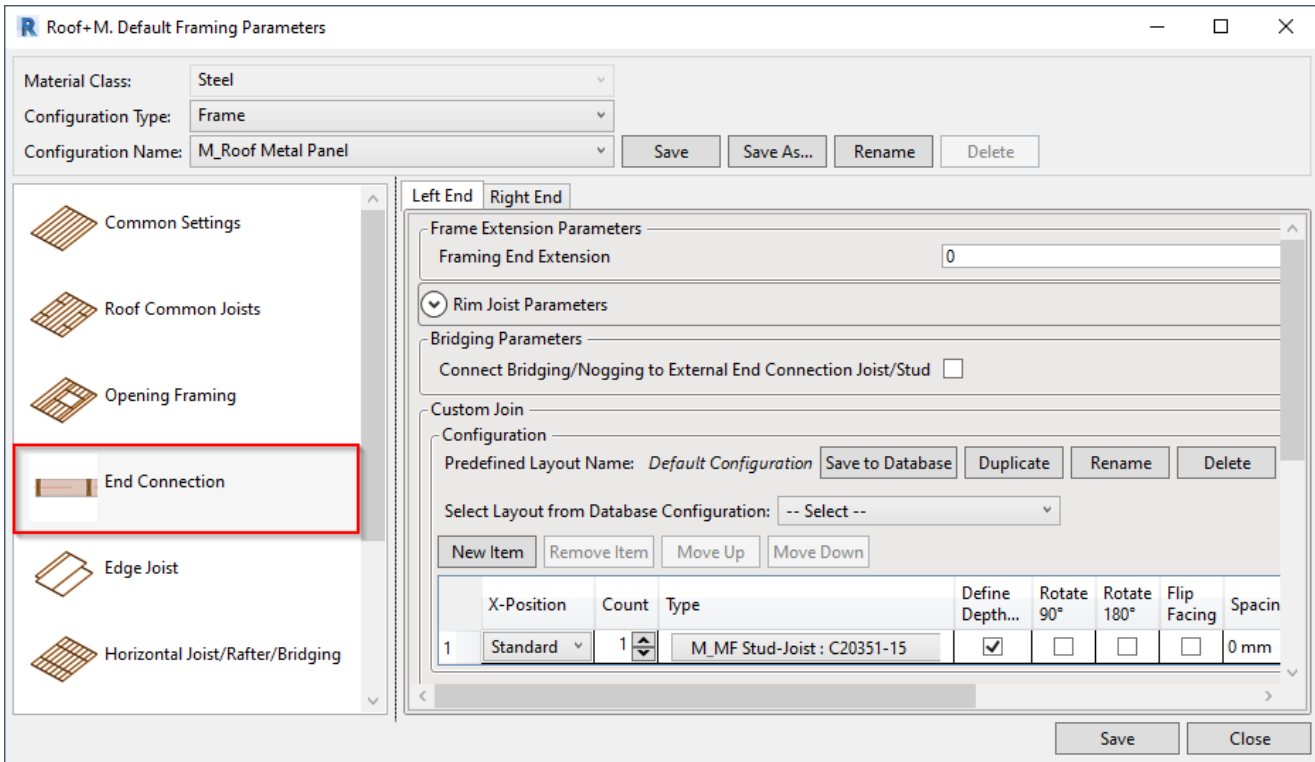

Roof+ supports various types of end connections.

Left End, Right End tabs – define ends of roof's left and right sides.

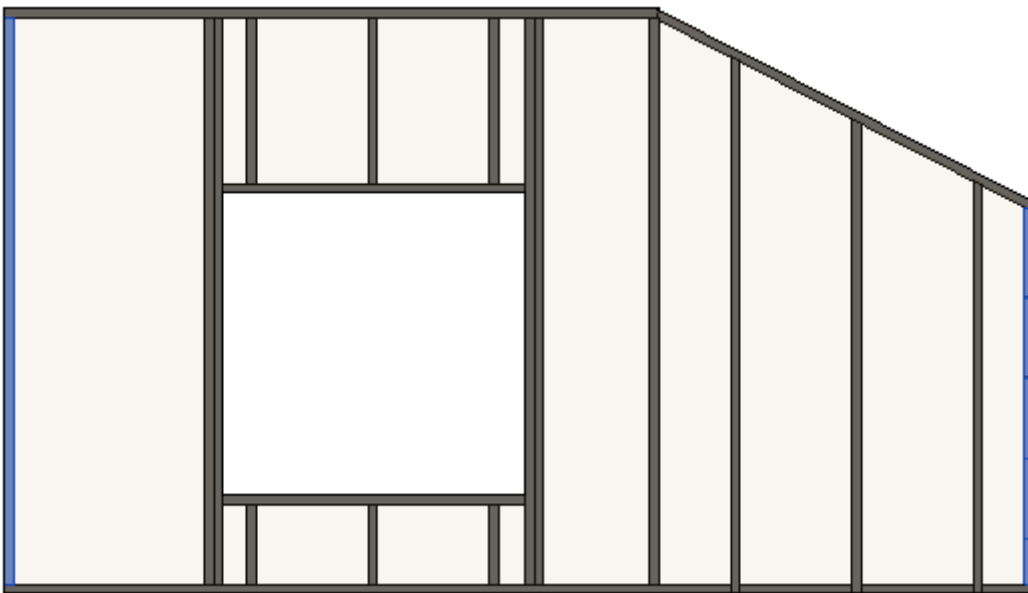

[Read more about every feature here >>](https://agacad.freshdesk.com/support/solutions/articles/44002142428-framing-configuration-%E2%80%93-end-connection) (<https://agacad.freshdesk.com/support/solutions/articles/44002142428-framing-configuration-%E2%80%93-end-connection>)

(<https://agacad.freshdesk.com/support/solutions/articles/44002142428-framing-configuration-%E2%80%93-end-connection>)