Smart Dimensions - Menu

Modified on: Fri, 12 Jun, 2020 at 10:51 AM

R	Sm	-		×
	Configu	urations		
	Dimension Elements in View			
	Update	Dimen	sions in	View
	Delete I	Dimens	ions in	View
	Modify	Dimen	sions	
	Dimens	ion Sel	ected El	ements
	Update	Dimen	sions	
	Delete	Dimens	ions	
	Dimens	ion Ele	ment	
	Dimens	ion Co	nfigurati	ion


Configurations - open configurations window.

Dimension Elements in View - will dimension all visibile elements based on selected Configuration.
Update Dimensions in View - will update dimensions by the configuration previously used in this View.
Delete Dimensions in View - will delete dimensions which were created with Smart Dimensions.
Modify Dimensions - allows you to modify dimensions in selected View by making instance changes.

Dimension Selected Elements - dimension only selected elements by selected Configuration.

Update Dimensions - update dimensions which were created with Dimension Selected Elements. You must select which one.

Delete Dimensions - delete dimensions which were created with Dimension Selected Elements. You must select which one.

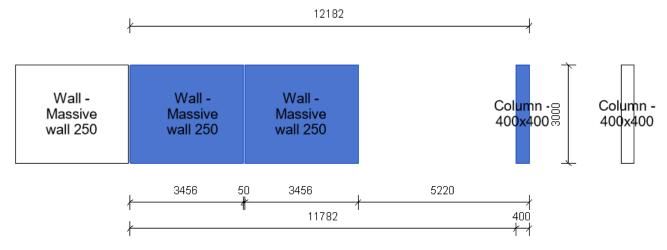

Dimension Element - dimension contour of one selected element by using Dimension Configuration (command below this one)

Dimension Configuration - define configuration for how to dimension contour of one single selected element.

08/09/21, 09:28

R Configuration Settings	– 🗆 X		
Horizontal Dimension	Vertical Dimension		
Total Dimension 💽	Total Dimension 🔽		
Total Dimension Side: Top ~	Total Dimension Side: Right ~		
Common Settings	Openings & Cuts Settings		
First Dimension Offset: 1.5	Dimension Openings 📐		
Dimension Type: Arrow - 2.5mm Arial 🗸	Dimension Cuts 🔽		
	First Dimension Offset: 1.5		
	OK Cancel		

You can choose the dimension style, total dimensions placement and whether openings/cuts should be dimensioned or not.

